ViewSonic®

ViewPad E72

User Guide
Guide de l’utilisateur
Guía del usuario
Guia do usuário

Model No. VS14905

Compliance Information

FCC NOTICE

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC ID: GSS-VS14905 on the product label.This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. This mobiledevice has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequencyenergy and, if not installed and used in accordance with the instructions, may cause harmful interferenceto radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void theuser's authority to operate the equipment. The antenna(s) used for this transmitter must not be colocated or operating in conjunction with any otherantenna or transmitter.

FCC SAR information

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The device was tested and complies to measurement standards and procedures specified in FCC OET Bulletin 65, Supplement C

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The highest SAR value for the device as reported to the FCC is 0.539 W/kg when placed next to the body.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of www.fcc.gov/oet/ea/fccid after searching on FCC ID: GSS-VS14905.

Canada Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

The County Code Selection feature is disabled for products marketed in the US/ Canada. For product available in the USA/ Canada markets, only channel 1~11 can be operated. Selection of other channels is not possible.

IMPORTANT NOTE:

IC Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in IC RSS-102 and had been tested in accordance with the measurement methods and procedures specified in IEEE 1528.

Important Safety Instructions

1. DO NOT place objects on top of the ViewPad, as objects may scratch the screen.
2. DO NOT expose the ViewPad to dirty or dusty environments.
3. DO NOT place the ViewPad on an uneven or unstable surface.
4. DO NOT insert any foreign objects into the ViewPad.
5. DO NOT expose the ViewPad to strong magnetic or electrical field.
6. DO NOT expose the ViewPad to direct sunlight as it can damage the LCD Screen. Keep it away from heat sources.
7. Do not store your device in temperatures higher than 50°C (122°F). The operating temperature for this device is from 0°C (32°F) to 35°C (95°F).
8. DO NOT use the ViewPad in the rain.
9. Please check with your Local Authority or retailer for proper disposal of electronic products.
10. The ViewPad and the adapter may produce some heat during normal operation or charging. DO NOT leave the ViewPad on your lap to prevent discomfort or injury from heat exposure.
11. POWER INPUT RATING: Refer to the rating label on the ViewPad and be sure that the power adapter complies with the rating. Only use accessories specified by the manufacturer.
12. DO NOT use a pen or any sharp object to tap the screen.
13. Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning. Never use abrasives or cleaning solutions.
14. Always power off the ViewPad to install or remove external devices that do not support hot-plug.
15. Disconnect the ViewPad from an electrical outlet and power off before cleaning the ViewPad.
16. DO NOT disassemble the ViewPad, only a certified service technician should perform repair.
17. The ViewPad has apertures to disperse heat. DO NOT block the ViewPad ventilation, the ViewPad may become hot and malfunction as a result.
18. Risk of explosion if battery replaced aced by an incorrect type. Dispose of used batteries according to the instructions.
19. Users have to use the connection to USB interfaces with USB 2.0 version or higher.
20. PLUGGABLE EQUIPMENT, the socket-outlet shell be installed near the equipment and shall be easily accessible.

Copyright Information

Copyright © ViewSonic® Corporation, 2012. All rights reserved.
Android is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.
This product has an Android™ platform based on Linux, which can be expanded by a variety of JME-based application SW.
All products used in this device and trademarks mentioned herein are trademarks or registered trademarks of their respective owners.
Google™, the Google logo, Android™, the Android logo and Gmail™ are trademarks of Google Inc. Use of this trademark is subject to Google Permissions.
Wi-Fi and the Wi-Fi CERTIFIED logo are registered trademarks of the Wireless Fidelity Alliance.
microSD™ is a trademark of SD Card Association.
Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.
Java, JME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
The prediction engine of the input method is TOUCHPAL, provided by COOTEK.
DataViz and RoadSync are registered trademarks of DataViz, Inc. All rights reserved.
DataViz and Documents To Go are trademarks or registered trademarks of DataViz, Inc. All rights reserved.
Word To Go™, Sheet To Go®, Slideshow To Go®, PDF To Go® and icons are trademarks or registered trademarks of DataViz, Inc. All rights reserved.
Disclaimer: ViewSonic Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.
In the interest of continuing product improvement, ViewSonic Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.
No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

Intellectual Property Right Information
Right to all technologies and products that comprise this device are the property of their respective owners:
This product has an Android platform based on Linux, which can be expanded by a variety of Java-Script-based application SW.
Google, the Google logo, Android, the Android logo, Gmail, and YouTube are trademarks of Google Inc.
Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc.
Java, JME and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
microSD is a trademark of SD Card Association.
The prediction engine of the input method is TOUCHPAL, provided by COOTEK.

Product Registration

To meet your future needs, and to receive any additional product information as it becomes available, please register your product on the Internet at: www.viewsonic.com.

For Your Records

Product Name:	ViewPad E72
Model Number:	VS14905
Document Number:	ViewPad E72_UG_ENG Rev. 1a 05-25-12
Serial Number:	_____
Purchase Date:	_____

Product disposal at end of product life

ViewSonic respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing. Please visit ViewSonic website to learn more.

USA & Canada: http://www.viewsonic.com/company/green/recycle-program/

Europe: http://www.viewsoniceurope.com/uk/kbase/article.php?id=639

Taiwan: http://recycle.epa.gov.tw/recycle/index2.aspx

Chapter 1: Getting Started 1
1.1 Your Device 1
Front 1
Back 1
Top 1
Bottom 2
Left & Right 2
1.2 Accessories 2
1.3 Installing Memory Card 3
1.4 Charging Battery 3
1.5 Using Headsets 4
1.6 Turning the Device On or Off 4
1.7 Unlocking the Screen 5

Chapter 2: The Basics 6
2.1 Home Screen 6
Extended Home screen 6
Shortcut menu 7
Using widgets 9
Application drawer 10
Setting wallpaper 10
2.2 Adjusting Volume 11
2.3 Setting up Wi-Fi 12

Chapter 3: Entering Information 13
3.1 On-Screen Keyboard 13
Using the on-screen keyboard 13
Setting input method 13
3.2 Configuring Keyboard Settings 13

Chapter 4: Email 15
4.1 Email Accounts 15
Setting up an Internet email account 15
Sending an email from Contacts 16
Receiving emails 16
To manually receive emails 16
Reading and replying to emails 16
To reply or forward an email 16

Chapter 5: Accessing the Internet 17
5.1 Browsing Web Pages 17
Managing web pages 18

Chapter 6: Multimedia Applications 19
6.1 Videos and Photos 19
Taking a photo 19
Recording a video 19

Reviewing a photo 19
Configuring camera settings 19
6.2 Viewing Videos & Photos 20
Playing videos 20
Viewing photos 20
6.3 Playing music 20
Playing music 20
Managing playlists 21

Chapter 7: Programs 22
7.1 Browser 23
7.2 Calculator 23
7.3 Calendar 23
7.4 Camera 24
7.5 Clock 24
7.6 Downloads 24
Managing files 25
7.7 Email 25
7.8 File Browser 25
Managing files and folders 25
7.9 Gallery 26
7.10 Music 26
7.11 Settings 26
7.12 YouTube 26
7.13 Dropbox 26
7.14 Note Everything 27
7.15 Sketcher 27
7.16 TuneIn Radio 27
7.17 Amazon Kindle 27
7.18 Amazon Appstore 27
7.19 Amazon MP3 27
7.20 Update 27

Chapter 8: Managing Your Device 28
8.1 Wireless & networks 28
8.2 Device Sound 28
8.3 Device Display 28
8.4 Device Storage 29
8.5 Device battery 29
8.6 Device Apps 29
8.7 Accounts and Sync 29
8.8 Location Services 29
8.9 Security 30
8.10 Language & Input 30
8.11 Backup & reset 30
8.12 Date and Time 31
8.13 Accessibility 31

Specifications **32**
Customer Support **33**
Limited Warranty **34**

Chapter 1: Getting Started

1.1 Your Device

Front

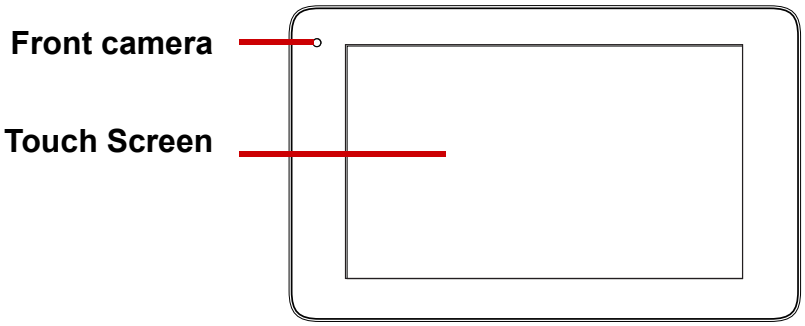

Back

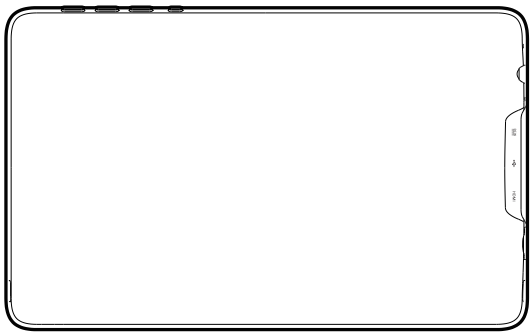

Top

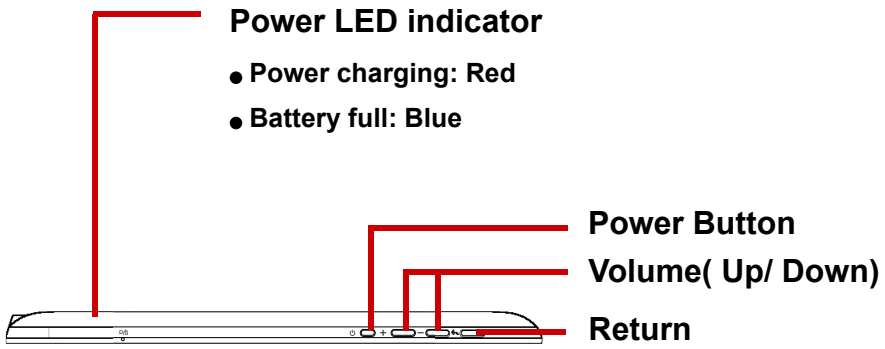

Bottom



Left & Right

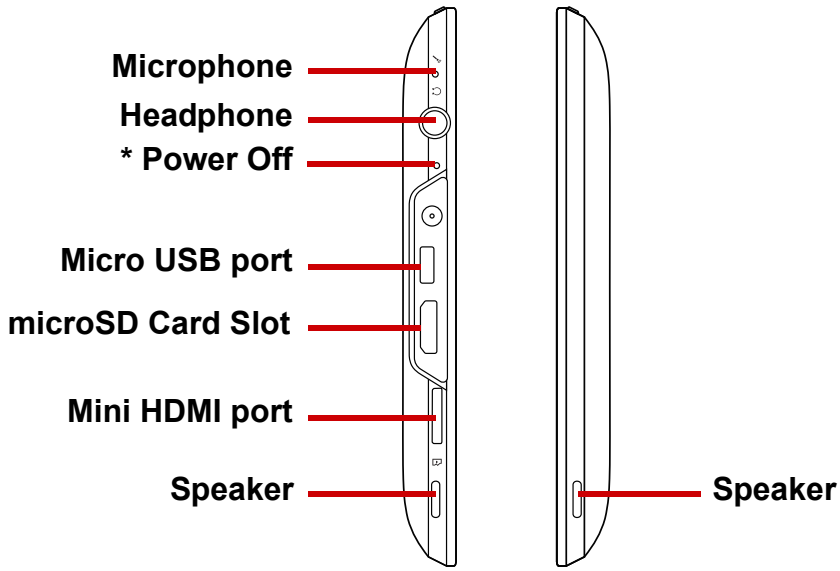

NOTE:

1. Micro USB port: Does not support power charging..
2. Connect a Micro USB to USB adapter to support a keyboard, mouse or memory stick that are under 500mA power requirement.
3. Micro USB port: Connect a Micro USB to USB cable to copy files between your computer and your Android SD card.

* “Power Off” - Use a paper-clip or similar item, insert and press gently to force Power Off in the event of a look-up caused by software or App error that prevents normal power off or restart.

1.2 Accessories

Your package comes with the following items. If any of them are missing, please contact your retailer.

- ViewPad E72
- AC adapter and plugs
- Quick Start Guide
- Compliance information

1.3 Installing MicroSD card

You need a MicroSD® card to store photos, music, videos, and other data.

To install the MicroSD card

1. Insert the MicroSD card as shown. Make sure the gold contacts are facing down.

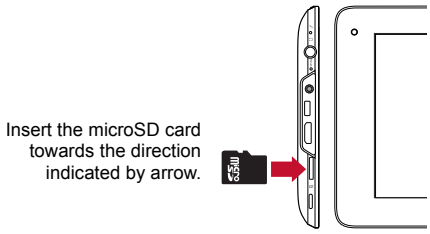

To remove the MicroSD card

1. For safe removal, tap **> Settings** > **Storage** > **Unmount card**.
2. Push to eject the MicroSD card from the slot.

NOTE: Do not remove the MicroSD card while the device is turned on. Sudden removal of the MicroSD card may cause data loss or unpredictable system hang up.

1.4 Charging Battery

The battery is only partially charged. To fully charge the battery, charge it for 3 hours.

NOTE: The LED indicator will turn to blue when fully power charged.

Charge the battery

1. Connect one end of the AC adaptor to the DC IN port of the device.
2. Plug the other end of the AC adaptor to the wall outlet to start charging.

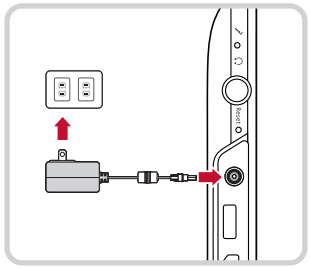

When the battery is charging and the device is turned on, the icon is displayed on the status bar. When the battery is fully charged, the icon is displayed on the status bar.

1.5 Using Headsets

For listening to music, plug a headset to the headset jack.

NOTE:

- When using a headset, your ability to hear outside sounds may be limited. Do not use headset if it will endanger you.
- When using a headset, do not set the volume to its maximum as it may damage your hearing.

1.6 Turning the Device On or Off

After installing the memory card and charging the battery, the device is ready to be turned on.

To turn on your device

Press and hold the **Power** button until the display on.

To turn off your device

1. Press and hold the **Power** button for 2 seconds.
2. A pop-up window appears, tap **OK** to confirm.

To set your device to Sleep mode

To set the device to sleep mode, press the **Power** button. This will turn the display off.

To turn the display on, press the **Power** button again.

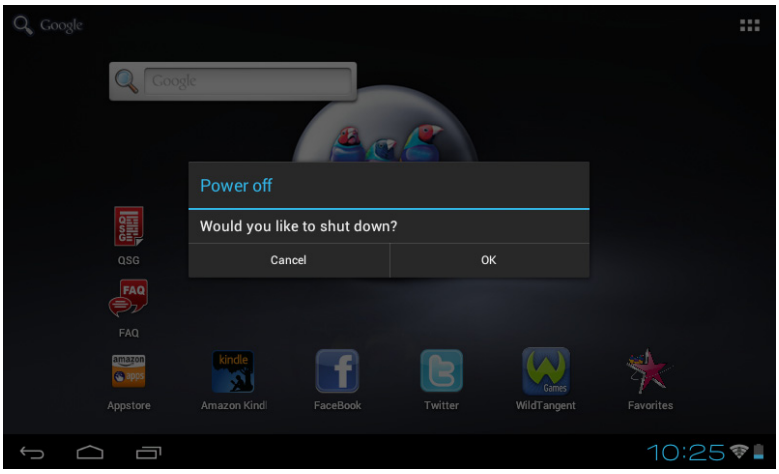

1.7 Unlocking the Screen

By default, the screen automatically locks after a period of inactivity. You can set the length of time until the screen locks.

To unlock the screen

1. Press the **Power** button to turn on the display from Sleep mode.

Tap and drag the middle circle ( ) to to unlock the screen.

Chapter 2: The Basics

2.1 Home Screen

From the Home screen, you can quickly access common features and view notifications of received messages, battery and connection status.

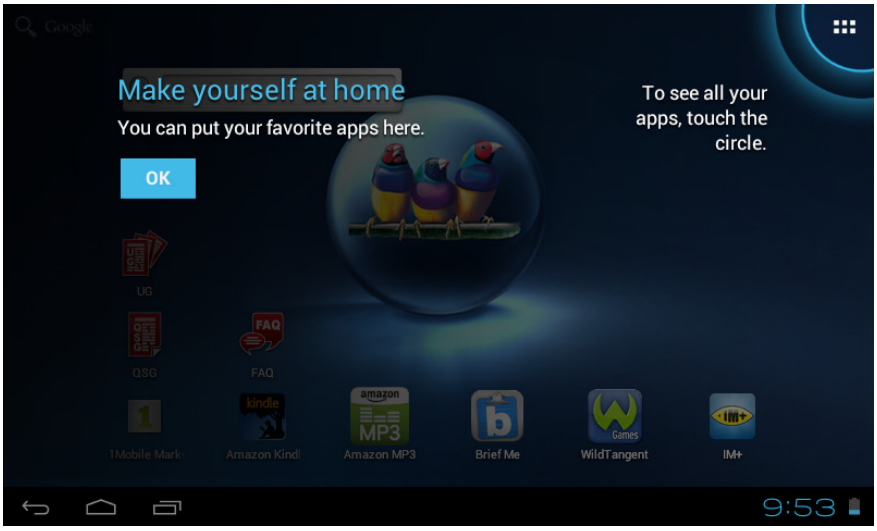

Extended Home screen

Swipe your finger to the left or right across the Home screen.
The two extensions to the left and to the right of the Home screen provide more space for icons, widgets, shortcuts, and other items.

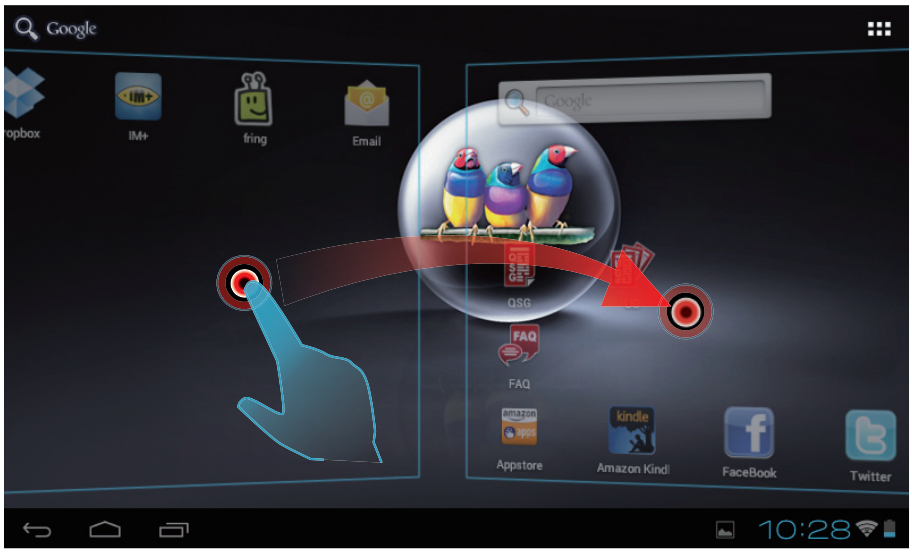

Shortcut menu

The shortcut menu allows you to easily access an application from the Home screen. To open an application, tap an icon.

Customizing shortcut menu

Home screen: Tap You can add apps and widgets to your home screen.

Touch & hold to move icon.

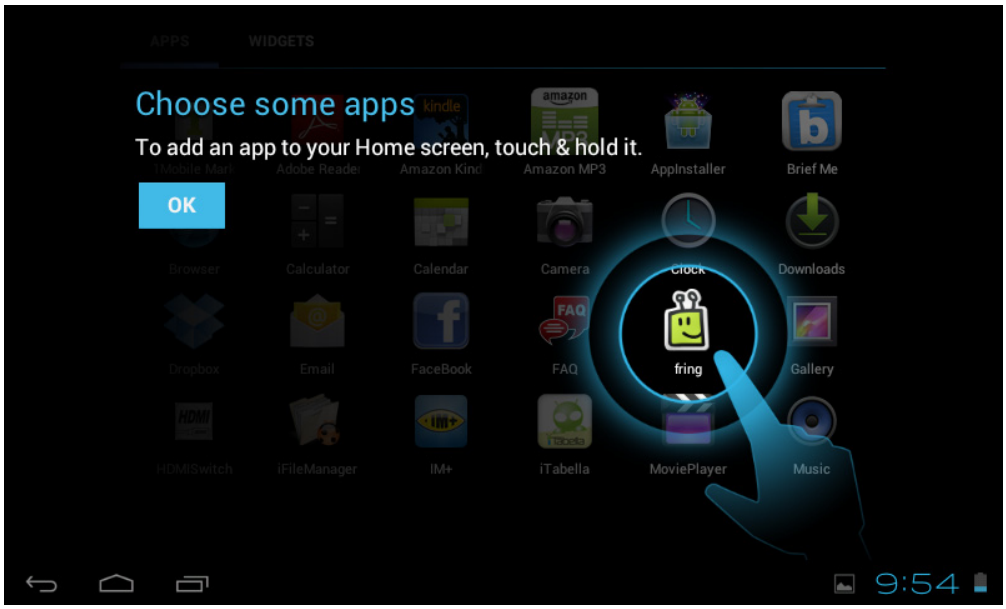

From this screen, you can add items to all home screen panels.Use panels to organize your Widgets and Apps.

To move or delete something, touch and hold on the icon, then drag it to another panel or to the Remove icon at the top of the screen.

Using widgets

Save time with live updates right on the Home screen and get all your personalized updates in one place.

You may add and customize the Widgets on the Home screen as you like.

1. From the Home screen, tap .
   All available widgets are displayed.
2. To add widget, drag the widget icon to the specific Home screen.

To remove widgets:

1. From the Home screen, tap and hold the desired widget. The Remove icon appears on the top right of the Home screen.
2. Drag the widget to Remove icon to delete it from the Home screen.

Application drawer

The Application Drawer contains all applications and settings. Tap to open the menu.

- Tap an icon to access the application.

Setting wallpaper

Wallpapers : Long press on empty space on desktop to change your wallpaper.

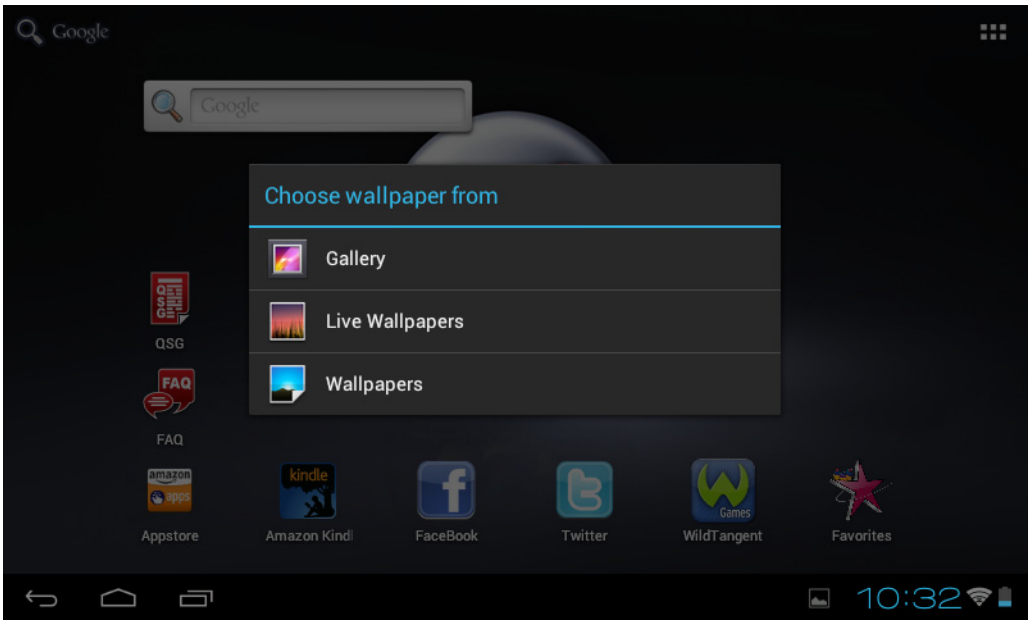

2.2 Adjusting Volume

This device features three types of volume which can be adjusted separately:

- **Notifications volume**: Set the volume for notifications.
- **Media volume:** Set the volume for music, videos, games, & other media.
- **Alarm volume**: Set the volume for alarms.

To adjust the volume

1. From the Home screen, tap > **Settings** > **Sound**.

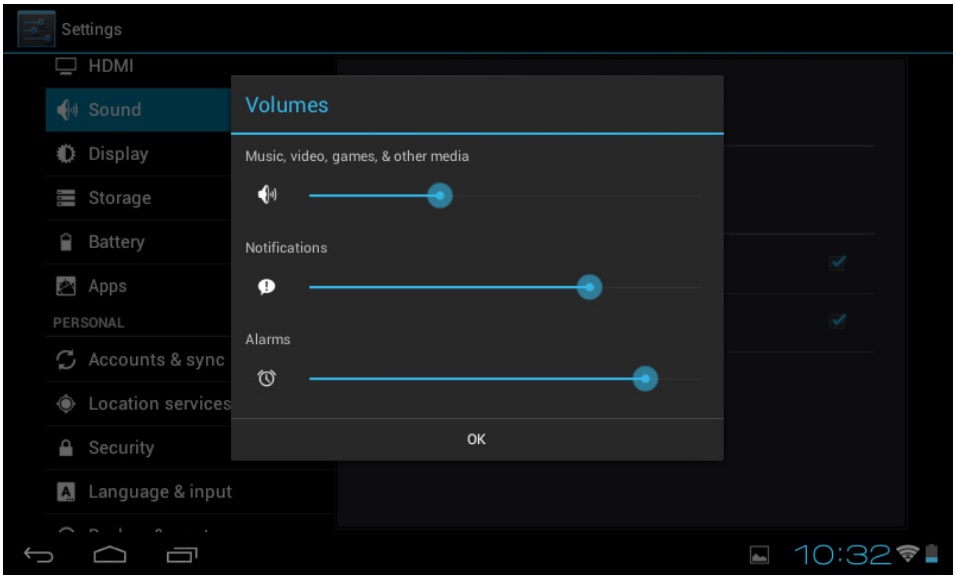

2. Tap **Volume**.
3. To adjust the volume, do either of the following:
   a. Drag the respective volume slider to adjust the volume.
   b. Press the volume button to adjust the volume.

   NOTE: When the device is set to silent mode, all sounds are turned off except alarm.
4. Tap **OK** to save your settings .

2.3 Setting up Wi-Fi

You need to connect to a wireless network before surfing the Internet or using the related applications that require internet connection.

To turn Wi-Fi on or off

1. From the Home screen, tap > **Settings** > **Wi-Fi**.
2. Tap **Wi-Fi** to turn Wi-Fi function on or off.

To connect to a Wi-Fi network

1. Turn Wi-Fi on.
2. Tap **Wi-Fi** to start detecting networks.
3. The available networks are listed. Tap a network to connect to or tap **ADD NETWORK** to manually add a connection.
4. If you select an unsecured network, the connection is automatically established. Otherwise, proceed to the next step.
5. When connecting to a secured network, you will be prompted for the password. Enter the password then tap Connect.

Chapter 3: Entering Information

3.1 On-Screen Keyboard

The on-screen keyboard appears when an application requires text input, such as messaging and writing emails. The keyboard input method is activated by default.

Using the on-screen keyboard

Tap the screen to display the on-screen keyboard.

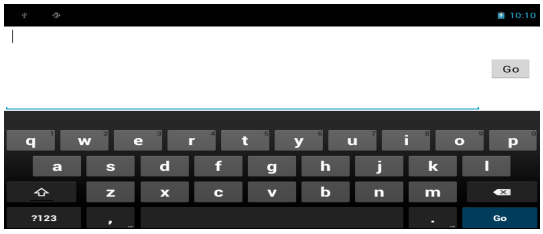

Lowercase keyboard

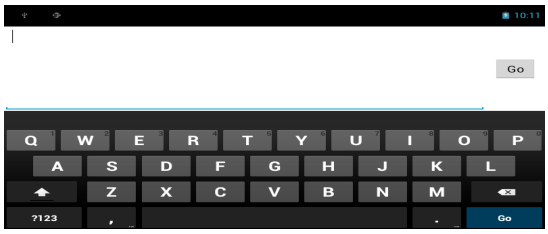

Uppercase keyboard

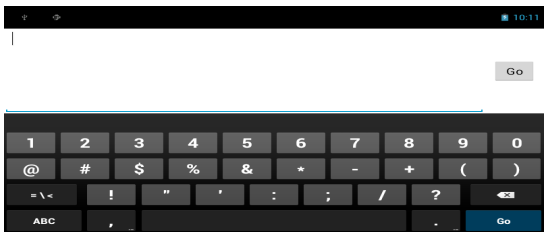

Numbers and symbols

- Tap the keys to enter the characters.
- To toggle between upper and lower case letter display, tap .
- To display the numeric and symbols keyboard, tap . To switch back to lower case letter display, tap .

3.2 Configuring Keyboard Settings

Use keyboard aids to set up various input settings.

1. From the Home screen, tap > **Settings** > **Language & input**.
2. Tap **Default** > **Android keyboard**.
3. Select the applicable options from the following Android keyboard settings:
    - **Auto-capitalization**: Select to automatically capitalize the first letter of a sentence.
    - **Sound on keypress**: Select to activate a clicking sound when a key is touched.
    - **Show settings key**: Select to activate a Setting key on keypad for setting.
    - **Auto correction :** Select to enter a highlighted word automatically if a space or punctuation symbol is typed.

- **Show correction suggestions :** Select to display suggested words as you type.

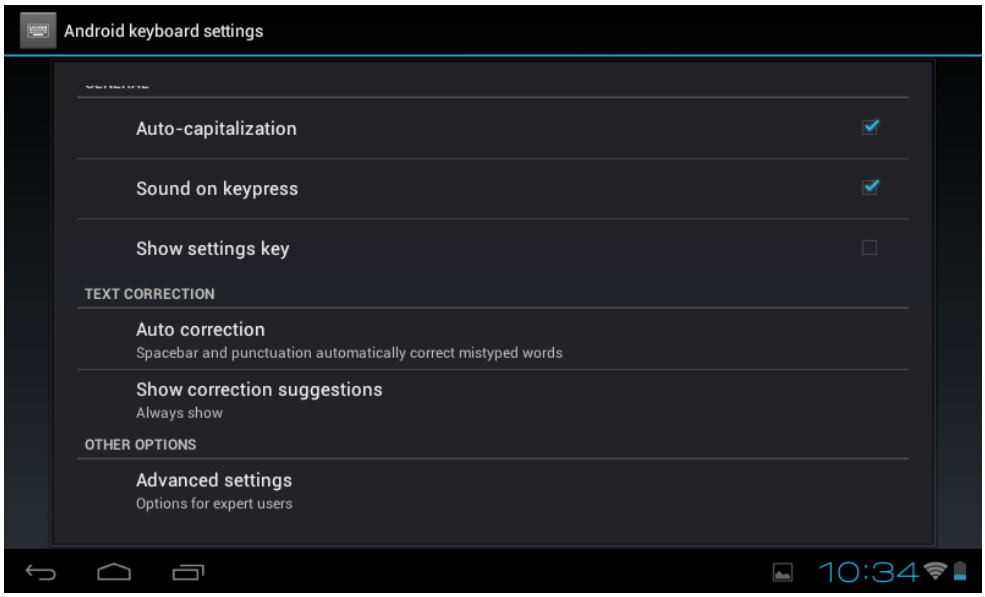

NOTE: Products shipped in certain regions include the Swype keyboard as the default input method. Press and hold the Swype icon on the keyboard to launch the Swype tutorial for more information.

Chapter 4: Email

Use **Email** to send and receive email messages via your internet email accounts.

4.1 Email Accounts

Your device can send and receive emails just as you do with a computer. Your device supports email accounts provided by an Internet Service Provider (ISP) or web-based email, such as Hotmail, Yahoo! Mail, etc.

Setting up an Internet email account

1. From the Home screen, tap > **Email**.
2. Enter your **Email address** and **Password**.
3. Tap **Next**. The device will automatically retrieve the email settings.
   - To add another email account, tap > **Settings** > **ADD ACCOUNT.**
4. Enter **Your Name** and **Account display name**.

   NOTE: The **Account display name** is the name shown to the recipients of your emails.
5. Tap **Next**.

   Once the account set up is completed, the device will automatically retrieve your emails.

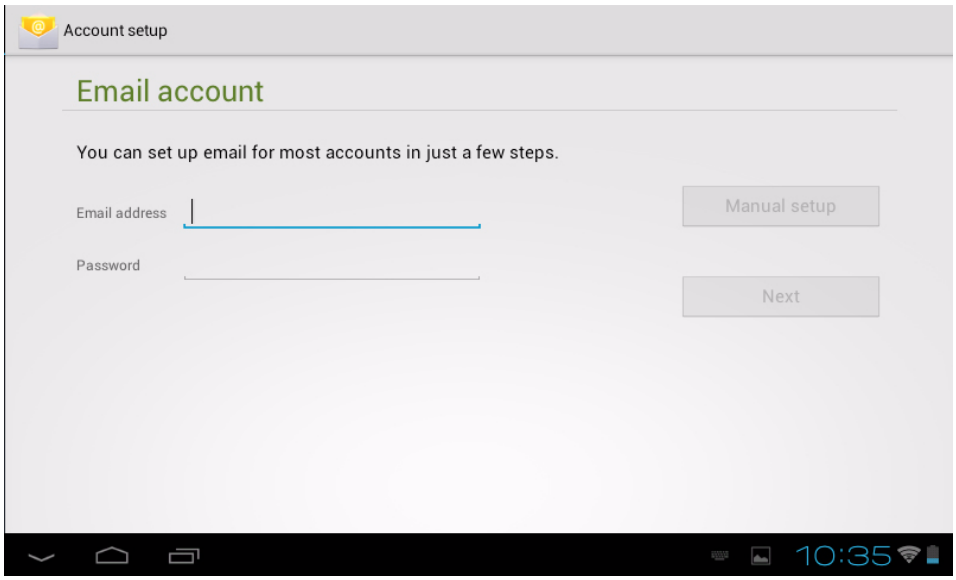

6. Tap the account picker box at the top left of the screen.
7. Tap the account you want to access from the available email accounts.

Sending an email from Contacts

You can send an email to a contact with an email address stored in Contacts.

1. From the Home screen, tap > **Contacts**.
2. Tap a name to open contact.
3. Tap **Email Home** or **Email Work**.
4. Enter a **Subject**.
5. Compose your email.
6. Tap Send.

Adding attachments to an email message

1. On the Compose screen, tap .
2. Select the file that you want to attach.

Receiving emails

Emails are automatically received in your Inbox when the device connects to a wireless network.

To manually receive emails

1. From the Home screen, tap > **Email**.
2. Tap an email account.
3. Tap .

Reading and replying to emails

Inbox displays email headers. Download the email to view the complete content.

To download attachments

- With POP3 email accounts, attachments are downloaded when you download the complete message.
- With IMAP4 email accounts, tap the attachment to mark it for download. The attachment is downloaded the next time you connect to your email server.

NOTE: Only supported file types can be opened on the device.

To reply or forward an email

1. From the Home screen, tap > **Email**.
2. Tap an email account.
3. Tap a message to open.
4. Do any of the following:
    - Tap (Reply) or (Reply all) to reply the email.
    - Tap (Forward). Then enter the recipient in the **To** field.
5. Compose your message.
6. Tap Send.

Chapter 5: Accessing the Internet

5.1 Browsing Web Pages

1. From the Home screen, tap > **Browser**.
2. Tap the address bar.
3. Type the URL. As you type, a list of URL suggestions appears on the screen.
4. Tap a match item in the list or enter the complete URL.

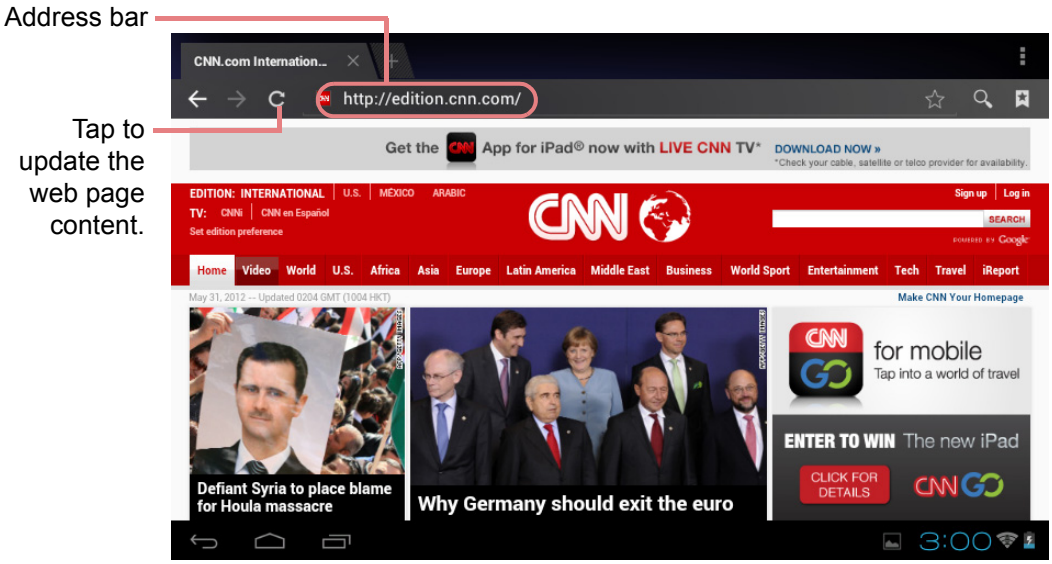

To scroll the page

To scroll up or down, swipe your finger down or up. To scroll left or right, tap and swipe your finger to the right or left.

To set Home page

1. While viewing a web page, tap > **Settings** > **General** > **Set home page**.
2. Enter the URL of the page that you want to set as home page.
3. Select **Current page** or **Default page**.
4. Tap **OK** to save your settings.

Managing web pages

While viewing a web page, tap to configure the browser settings:

- **General**: Select to set home page, and configure sync data and auto fill settings.
- **Privacy & Security**: Select to configure privacy and security settings including cache, history, cookies, form data, location, and etc.
- **Advanced**: Select to set search engine, open in background, enable JavaScript, enable plug-ins, advanced settings for individual website, page content settings, and reset all settings to the factory default.

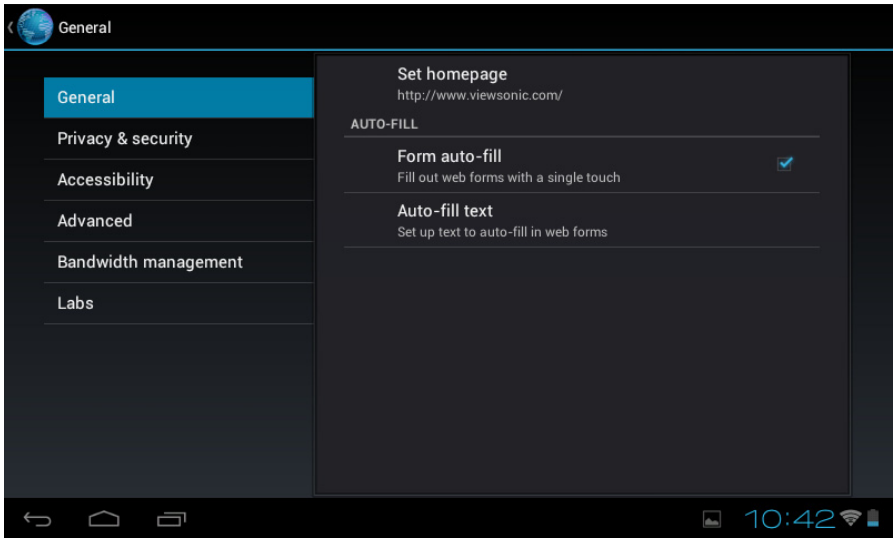

Chapter 6: Multimedia Applications

6.1 Videos and Photos

Your device is equipped with a front camera for you to take photos and record videos.

Taking a Photo

1. On the Home screen, tap > **Camera**.
2. Aim the device at the desired subject.
3. Tap to take the photo.

Recording a Video

1. On the Home screen, tap > **Camera**.
2. Tap to go to the video mode.
3. Aim the device at the desired subject.
4. Tap to start recording, and tap to stop recording.

Reviewing a photo

After taking a photo, tap the window located at top right corner to preview the latest captured photo on the screen.

Configuring Camera Settings

You can adjust the settings when you take photos or videos. Tap the icon to access the respective menu, and scroll the bar to view more options.

Tap to view and adjust the general settings of your camera:

Mode	Setting	Available options
Photo mode	White balance	Auto, Incandescent, Daylight, Fluorescent
	Exposure	+4, +3, +2, +1, 0, -1, -2, -3, -4
	AntiBanding	50hz/ 60hz
Video mode	White balance	Auto, Incandescent, Daylight, Fluorescent
	Time lapse interval	Off,1s, 1.5s, 2s, 2.5s, 3s, 5s, 10s
	Camera settings	Restore defaults, Store location (Off/ On)

6.2 Playing Photos and Videos

The photos and videos you recorded are saved in the respective folder categories in Gallery by default.

Viewing Photos

1. On the Home screen, tap > **Gallery.**
2. Tap **Photos** to view the images in thumbnails.
3. Tap an image to view it in full screen.
4. Swipe your finger to left or right to view the previous or next image.

Tap Slideshow, the images will play one by one automatically in slideshow mode. And if you want to share, edit or delete the image, please tap Menu and then select the desired option.

Playing Videos

1. On the Home screen, tap > **Gallery.**
2. Tap **Videos** to display all saved videos.
3. Tap a video to start playing.

6.3 Playing Music

You can play the music stored in your device or inserted Micro SD card.

Playing Music

1. On the Home screen, tap > **Music.**
2. Select the desired track from the **Songs** list or **Playlists** to play it.
3. Press the Volume button to increase or decrease the playback sound.

During playback, you can press the desired playing list.

Item	Description
	To play the track
	To pause the track
	Play the previous track
	Play the next track

Process bar	Play forward or backward
	To view the playing list
	Turn on or off shuffle
	Repeat the current song or all songs, or turn off repeat

NOTE:

You can leave the playback screen and browse other pages without stopping the playback.

Managing Playlist

You can add any songs to your preferred playlist.

To play music

1. On the Home screen, tap > **Music**.
2. Tap and hold the desired track until a pop-up window appears.
3. Tap **Add to playlist**, and then select **Current playlis**t or **New** to save.

If you select New, you need to enter the playlist name and then tap Save to create a new playlist.

Chapter 7: Programs

Your device comes with the following pre-installed programs.

	Programs	Description
	Browser	Browse the web and download files from the Internet.
	Calculator	Perform basic arithmetic functions, such as addition, subtraction, multiplication, and division. See page 23.
	Calendar	Create and track schedule or appointments.
	Camera	Capture photos.
	Clock	Set up alarms.
	Downloads	View or delete the files that you have downloaded in Browser, Gmail, or Email.
	Email	Send and receive email messages.
	File Browser	Manage audio, video, photo, and other files.
	Gallery	View and edit photos and videos.

7.1 Browser

Open the **Browser** to view web pages.

7.2 Calculator

With **Calculator**, you can perform basic arithmetic functions on your device.

1. From the Home screen, tap > **Calculator**.
2. Use the on-screen calculator keypads to perform arithmetic calculation.

7.3 Calendar

The **Calendar** lets you schedule and sound alarms for appointments, meetings and other events. Scheduled appointments for the day can be displayed on the Home screen.

To schedule an event

1. From the Home screen, tap > **Calendar**.

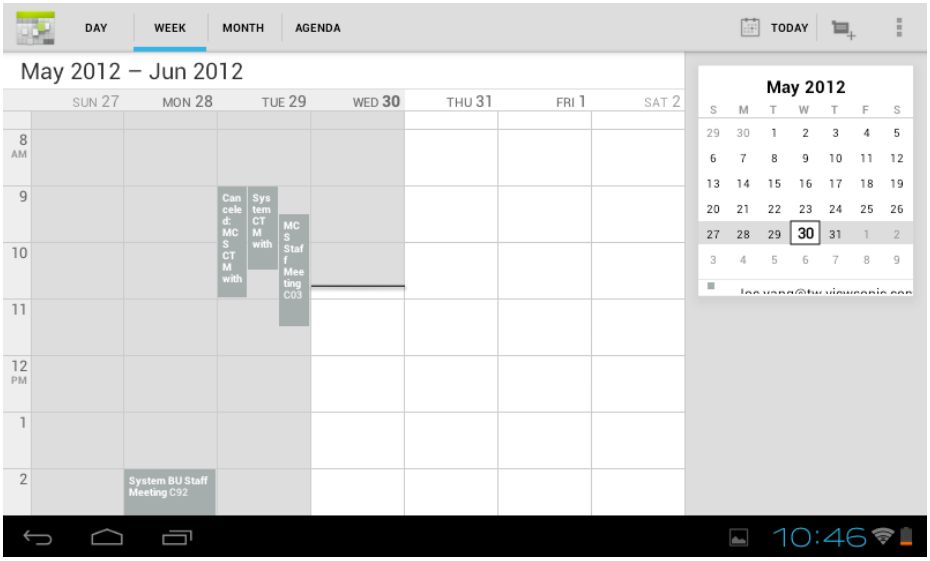

2. Tap .
3. Enter the event details.
4. Select the date and time for **From** and **To** fields.

   NOTE: For an all-day event, check **All day**.
5. To set repetition, select the repetition from the list.
6. To set a reminder, select the time from the list.
7. When finished, tap Done.

   TIP: From the Calendar screen, tap and hold a day or a time slot then set a new appointment on the tapped date or time.

7.4 Camera

Capture photos with this device.

7.5 Clock

Set alarms with this device.

7.6 Downloads

Use **Downloads** to view or delete what you have downloaded in Browser, Gmail, or Email.

NOTE: The downloaded files are stored in the “Download” folder in your memory card.

1. From the Home screen, tap > **Download**.
2. Tap an image to view it.

Managing files

- To delete a file, tap the check box on the left side of the image. A green tick appears, tap **Delete**.
- To sort the file by size, tap > **Sort by size**.
- To sort the file by time, tap > **Sort by time**.
- To view files that have been downloaded earlier, tap the headings.

7.7 Email

Use **Email** to connect to your remote mailbox and retrieve your email messages from your device.

7.8 File Browser

File Browser lets you browse the contents of your device and the memory card.

1. From the Home screen, tap > **File Browser**.
2. Tap the folder list and tap the folder you want to explore.

Managing files and folders

- To open a folder or file, tap the file or folder.
- To move, delete, rename or view file or folder details, tap and hold to view the options. Then tap a desired option.
- To copy, tap and hold a file or folder, then tap **Copy**. To paste a file or folder, tap > **Paste**.
- To create a new folder, tap > **New folder**.
- To sort items, tap > **Sort**, then tap a sorting option.
- To mark a file or folder, tap > **Mark**.
- To copy all files and folders, tap > **Copy all**.

- To delete all files and folders, tap > **More** > **Delete all**.
- To search for a file, tap > **More** > **Search**.

7.9 Gallery

You can view your captured images, recorded video clips, and downloaded images in **Gallery**.

1. From the Home screen, tap > **Gallery**.
2. Tap the desired folder to view the camera pictures or camera videos.
   The images or videos are displayed in thumbnails.

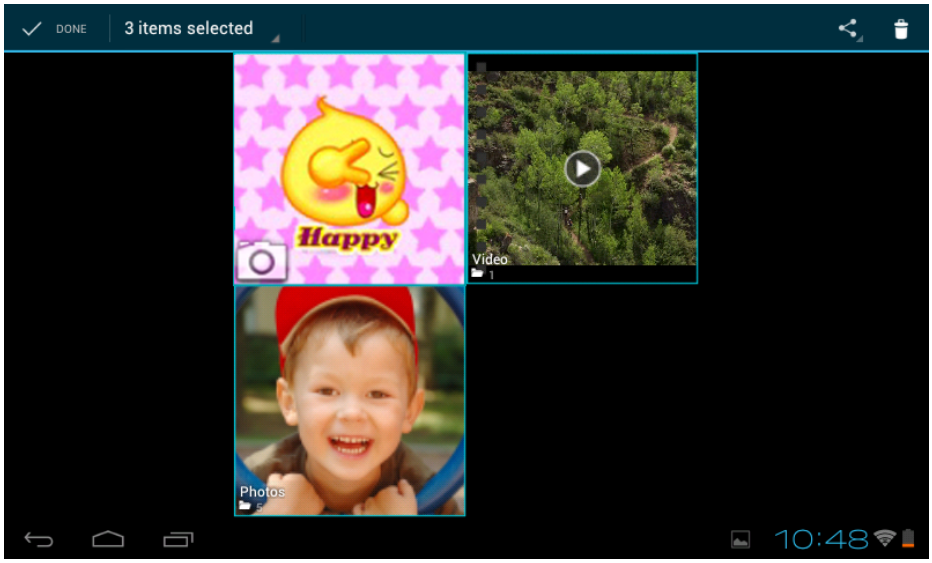

7.10 Music

Use **Music** to play music files or recorded voice files.

7.11 Settings

In the **Settings** menu, you can view and make adjustments for wireless & network settings, device general settings and security settings.

7.12 YouTube

Use **YouTube** to watch, upload, and view videos from YouTube using your device.

7.13 Dropbox

DropBox gives you 2GB of free cloud storage. Access all your important documents, media files and more, anywhere, right from your ViewPad. If you don’t have a DropBox account, you can create one easily for free the first time you launch the app.

7.14 Note Everything

This full-featured note taking app makes it easy to create, view and manage text notes, as well as hand-drawn notes and voice recordings.

7.15 Sketcher

Create beautiful drawings with the sketchpad app, featuring a variety of textured brushes and colors.

7.16 TuneIn Radio

Listen to your favorite AM/FM and Internet radio stations from around the globe. You can browse by category, genre or location, search for artists, and bookmark your favorite stations.

7.17 Amazon Kindle

Buy and read your e-books from Amazon Kindle. Log in with your Amazon account to read your Kindle e-books or browse and download new ones.

7.18 Amazon Appstore

Amazon Appstore for Android offers instant download of thousands of free and premium apps for communication, entertainment and more. Simply sign in with your Amazon account. (Currently only available in the USA.)

7.19 Amazon MP3

Amazon MP3 includes the Amazon MP3 store and cloud player. Browse, preview and listen to your favorite music, whether stored on your SD card or in your Amazon Cloud Drive. (Currently available only in the USA and Europe.)

7.20 Update

Check if a new firmware is available for your device and perform the system update. Please refer to the screen instruction to manually start the firmware update.

NOTE: Please make sure that your device has at least 50% battery power or the AC adapter is plugged-in.

Chapter 8: Managing Your Device

8.1 Wireless & networks

From the Home screen, tap > **Settings** to view and adjust the settings of your device.

Application	Description
WiFi	Manage Wi-Fi connections, scan and connect to available Wi-Fi networks.
Data Usage	Mobile Data : Measured by your tablet. Your carrier's data usage accounting may differ.
Airplane mode	Disable all wireless connections.
VPN settings	Set up and manage Virtual Private Networks (VPNs).
Mobile networks	Set options for roaming, networks, and Access Point Names.

8.2 Device Sound

Application	Description
Volume	Adjust the volume for media, notification, and alarms.
Silent mode	Turn silent mode on/off. All sounds except media and alarms are turned off.
Ringtone & Notification	Set your default notification ringtone.
Vibrate and ring	Set up device vibrate and ring.
Touch sounds	Play sounds when touch screen.
Screen lock sounds	Play sounds when locking or unlocking the screen.

8.3 Device Display

Application	Description
Brightness	Adjust the brightness of the screen.
Wallpaper	Choose wallpaper from Gallery, Live Wallpapers and Wallpapers.
Auto-rotate screen	Switch orientation automatically when rotating the device.
Sleep	Adjust display enter sleep inactivity time.
Font size	Set up Font size from small, normal, Large and Huge.

8.4 Device Storage

Application	Description
Internal storage	Show available device storage on total space.
Unmount SD card	Unmount the SD card so you can safety remove it.
Erase SD cad	Erases all data on the SD card, such as music and photos.

8.5 Device battery

Application	Description
Battery	View the battery usage on the currently running applications.

8.6 Device Apps

Application	Description
Downloaded	Manage and remove downloaded applications.
On SD card	Manage and remove applications on SD card.
Running	View and manage running and cached processes.
All	View and manage all applications.

8.7 Accounts and Sync

Applications	Description
Auto-sync	Automatically sync data.
Manage accounts	Tap **Add** account to add an account to configure synchronization settings for Calendar, Contacts, and Gmail.

8.8 Location Services

Application	Description
Google location service	Let apps use data from sources such as Wi-Fi and networks to determine your approximate location.

8.9 Security

Application	Description
Screen lock	Set up screen lock with none, Slide, Pattern, PIN or Password.
Owner Information	Show owner info on lock screen.
Set up SIM card lock	Set up SIM card lock info.
Device administrators	View or deactivate device administrator.
Unknown sources	Allow installation of non-Market apps.
Trusted credentials	Display trusted CA certificates.
Install from SD card	Install certificate from SD card.

8.10 Language & Input

Application	Description
Languages	Set the on-screen display language for your device.
Spelling correction	Spelling correction by Android.
Personal dictionary	Add or edit user preset words to the dictionary.
Default	Android languages and keyboard settings.
Text-to-speech output	Set the text-to-speech settings.
Mouse/trackpad pointer speed	Set the pointer speed.

8.11 Backup & reset

Application	Description
Factory data reset	Delete all data on the device and restore to factory default settings.

8.12 Date and Time

Application	Description
Automatic date and time	Check to use network provided time.
Automatic time zone	Check to use network provided time zone.
Set date	Set the date.
Set time	Set the time.
Select time zone	Select the time zone of your current location.
Use 24-hour format	Set the clock to 24-hour format.
Select date format	Set the preferred date format.

8.13 Accessibility

Application	Description
System Accessibility	Configure the settings for the downloaded application with an accessibility feature.
Large text	Set the text.
Auto-rotate screen	Set device auto-rotate screen.
Speaker passwords	Set up speaker passwords.
Touch & hold delay	Set up touch & hold delay time on short, medium or long.
Install web scripts	Allow apps to install scripts from Google to make web contents more accessible.

About tablet

Check the system update and view device status, battery usage, legal information, model number, and software version.

Specifications

Connectivity	
Wi-Fi	802.11 b/g/n
Mini HDMI	Yes
Headphone	3.5 mm jack
MicroSD	2GB/4GB/8GB/16GB/32GB
USB	USB 2.0 High-Speed client (micro-B type)
Power	
Battery	1 cell battery pack (3300mAH, in series), unremovable
AC Adapter	AC input voltage: 100-240Vac, 50/60Hz AC input current: 300mAac max. DC output voltage: 5Vdc (typical) DC output current: 2A (typical)
Temperature	
Operating	0ºC to 35ºC
Non-operating / Storage	-20ºC to 65ºC
Charging	0ºC to 35ºC
Humidity	
Operating	15% to 90% non-condensing
Non-operating / Storage	5% to 95% non-condensing

Customer Support

For technical support or product service, see the table below or contact your reseller.
NOTE: You will need the product serial number.

Country/Region	Website	T = Telephone F = FAX	Email
Australia/New Zealand	www.viewsonic.com.au	AUS= 1800 880 818 NZ= 0800 008 822	service@au.viewsonic.com
Canada	www.viewsonic.com	T (Toll-Free)= 1-866-463-4775 T (Toll)= 1-424-233-2533 F= 1-909-468-3757	service.ca@viewsonic.com
Europe	www.viewsoniceurope.com	www.viewsoniceurope.com/uk/support/call-desk/	
Hong Kong	www.hk.viewsonic.com	T= 852 3102 2900	service@hk.viewsonic.com
India	www.in.viewsonic.com	T= 1800 266 0101	service@in.viewsonic.com
Ireland (Eire)	www.viewsoniceurope.com/uk/	www.viewsoniceurope.com/uk/support/call-desk/	service_ie@viewsoniceurope.com
Korea	www.kr.viewsonic.com	T= 080 333 2131	service@kr.viewsonic.com
Latin America (Argentina)	www.viewsonic.com/la/	T= 0800-4441185	soporte@viewsonic.com
Latin America (Chile)	www.viewsonic.com/la/	T= 1230-020-7975	soporte@viewsonic.com
Latin America (Columbia)	www.viewsonic.com/la/	T= 01800-9-157235	soporte@viewsonic.com
Latin America (Mexico)	www.viewsonic.com/la/	T= 001-8882328722	soporte@viewsonic.com
Renta y Datos, 29 SUR 721, COL. LA PAZ, 72160 PUEBLA, PUE. Tel: 01.222.891.55.77 CON 10 LINEAS Electroser, Av Reforma No. 403Gx39 y 41, 97000 Mérida, Yucatán. Tel: 01.999.925.19.16 Other places please refer to http://www.viewsonic.com/la/soporte/index.htm#Mexico			
Latin America (Peru)	www.viewsonic.com/la/	T= 0800-54565	soporte@viewsonic.com
Macau	www.hk.viewsonic.com	T= 853 2870 0303	service@hk.viewsonic.com
Middle East	ap.viewsonic.com/me/	Contact your reseller	service@ap.viewsonic.com
Puerto Rico & Virgin Islands	www.viewsonic.com	T= 1-800-688-6688 (English) T= 1-866-379-1304 (Spanish) F= 1-909-468-3757	service.us@viewsonic.com soporte@viewsonic.com
Singapore/Malaysia/ Thailand	www.viewsonic.com.sg	T= 65 6461 6044	service@sg.viewsonic.com
South Africa	ap.viewsonic.com/za/	Contact your reseller	service@ap.viewsonic.com
United Kingdom	www.viewsoniceurope.com/uk/	www.viewsoniceurope.com/uk/support/call-desk/	service_gb@viewsoniceurope.com
United States	www.viewsonic.com	T (Toll-Free)= 1-800-688-6688 T (Toll)= 1-424-233-2530 F= 1-909-468-3757	service.us@viewsonic.com

Limited Warranty

ViewSonic® ViewPad

What the warranty covers:
ViewSonic warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:
ViewSonic ViewPad are warranted for at least 1 year for labor from the date of the first customer purchase.

Who the warranty protects:
This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:
1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
   a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
   b. Any damage of the product due to shipment.
   c. Removal or installation of the product.
   d. Causes external to the product, such as electric power fluctuations or failure.
   e. Use of supplies or parts not meeting ViewSonic's specifications.
   f. Normal wear and tear.
   g. Any other cause which does not relate to a product defect.
3. Any product exhibiting a condition commonly known as "image burn-in" which results when a static image is displayed on the product for an extended period of time.
4. Removal, installation, one way transportation, insurance, and set-up service charges.

How to get service:
1. For information about receiving service under warranty, contact ViewSonic Customer Support (Please refer to Customer Support page). You will need to provide your product's serial number.
2. To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take the original container to an authorised ViewSonic Service Centre or use the prepaid product freight option to ship to ViewSonic directly.
4. For additional information or the name of the nearest ViewSonic service center, contact ViewSonic.

Limitation of implied warranties:
There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

Exclusion of damages:
ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic shall not be liable for:

1. Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
2. Any other damages, whether incidental, consequential or otherwise.
3. Any claim against the customer by any other party.
4. Repair or attempted repair by anyone not authorized by ViewSonic.

4.3: ViewSonic TPC Warranty TPC_LW01 Rev. 1e 08-06-10

ViewSonic®